


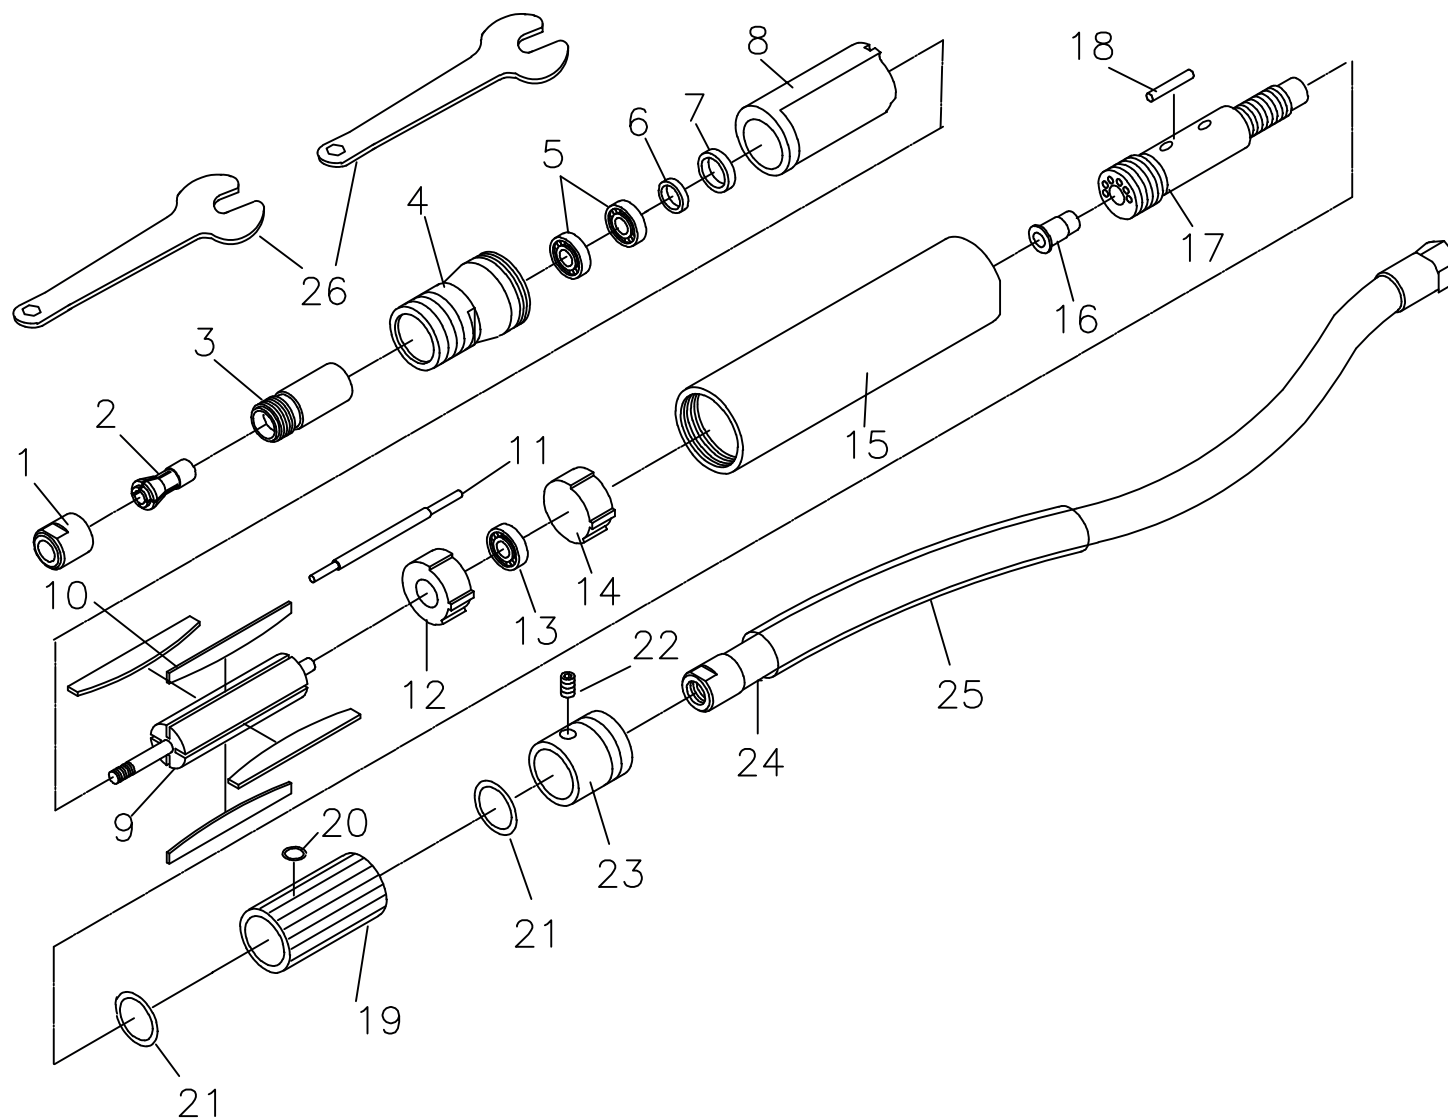

Art. 515.3197

Part. No	Art.-Nr.	Beschreibung	Description	Menge Qty.
1	515.3197-R001P	Kappe	Cap	1
2	515.3197-R002P	Spannfutter	Chuck	1
3	515.3197-R003P	Hülse	sleeve	1
4	515.3197-R004P	Frontabdeckung	Front cover	1
5	515.3197-R005P	Lager	Bearing	2
6	515.3197-R006P	Obere Abdeckung	Upper cover	1
7	515.3197-R007P	Distanzring	Spacer ring	1
8	515.3197-R008P	Zylinder	Cylinder	1
9	515.3197-R009P	Rotor	Rotor	1
10	515.3197-R010P	Kevlar-Blätter	Kevlar blades	4
11	515.3197-R011P	Passstift	Straight pin	1
12	515.3197-R012P	Untere Abdeckung	Lower cover	1
13	515.3197-R013P	Lager	Bearing	1

Part. No	Art.-Nr.	Beschreibung	Description	Menge Qty.
14	515.3197-R014P	Untere Abdeckungsbasis	Lower cover base	1
15	515.3197-R015P	Hauptkörper	Main body	1
16	515.3197-R016P	Führungshülse	Guide sleeve	1
17	515.3197-R017P	Lufteinlassrohr	Air intake pipe	1
18	515.3197-R018P	Fixierstift	Fixing pin	1
19	515.3197-R019P	Luftmengenregler	Air volume regulator	1
20	515.3197-R020P	O-Ring	O-ring	1
21	515.3197-R021P	O-Ring	O-ring	2
22	515.3197-R022P	Schraube	Screw	1
23	515.3197-R023P	Fixierhülse	Fixing sleeve	1
24	515.3197-R024P	Schwarzes Ansaugrohr	Black intake pipe with female nozzle set	1
25	515.3197-R025P	Schalldämpferrohr	Muffler pipe	1