


Art. 515.3980

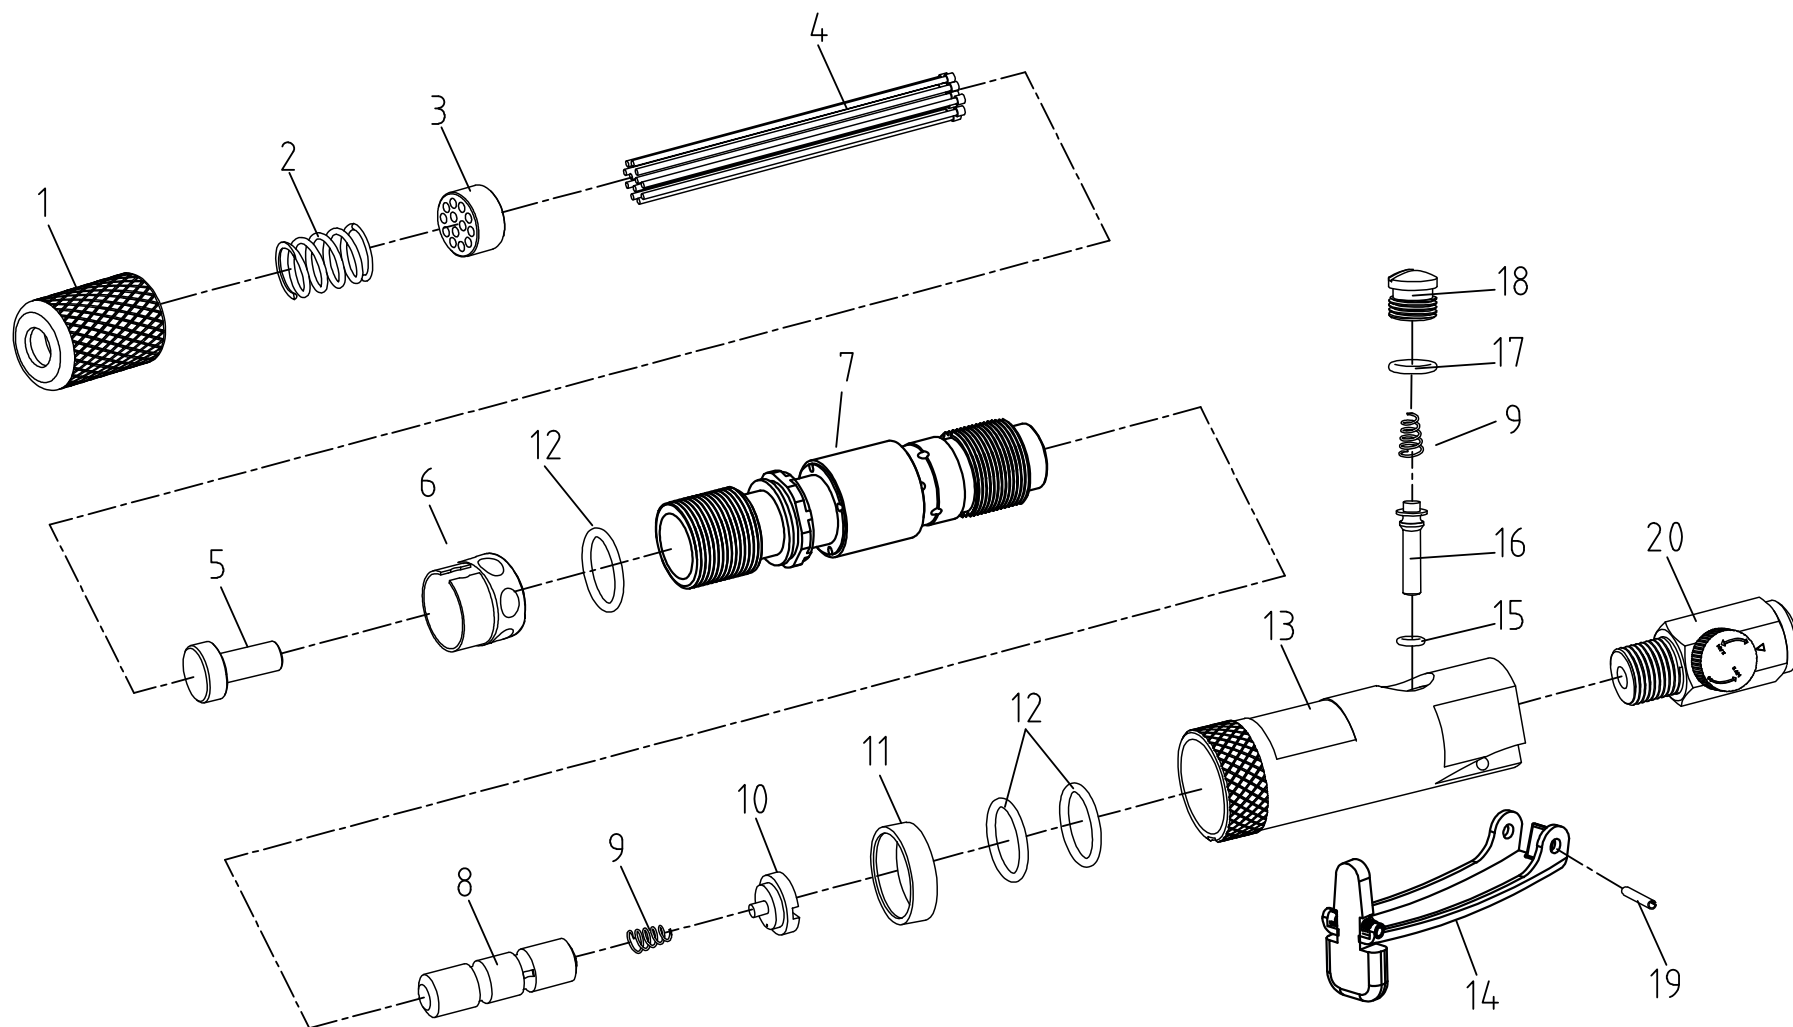

Art. 515.3980

Part. No	Art.-Nr.	Beschreibung	Description	Menge Qty.
1	515.3980-R001P	Frontabdeckung	Front cover	1
2	515.3980-R002P	Feder	Spring	1
3	515.3980-R003P	Befestigungsstück (13 Löcher)	Fixing piece (13 holes)	1
4	515.3980-R004P	Entkalkungsnadeln Ø1,4 mm	Descaling needles Ø1,4 mm	13
5	515.3980-R005P	Hammerkopf	Hammer head	1
6	515.3980-R006P	Sicherungsring	Lock ring	1
7	515.3980-R007P	Verbindungswelle	Connecting shaft	1
8	515.3980-R008P	Kolbenhülse	Piston sleeve	1
9	515.3980-R009P	Feder	Spring	1
10	515.3980-R010P	Ventil	Valve	1

Part. No	Art.-Nr.	Beschreibung	Description	Menge Qty.
11	515.3980-R011P	Innenring	Inner ring	1
12	515.3980-R012P	O-Ring	O-ring	3
13	515.3980-R013P	Hauptkörper	Main body	1
14	515.3980-R014P	Sicherheitshebel	Safety trigger	1
15	515.3980-R015P	O-Ring 3,5×1,5 mm	O-ring 3,5×1,5 mm	1
16	515.3980-R016P	Luftabschaltstift	Air shutoff pin	1
17	515.3980-R017P	O-Ring 8 x 2 mm	O-ring 8 x 2 mm	1
18	515.3980-R018P	Verschlusskappe	Locking cap	1
19	515.3980-R019P	Hohlstift Ø3 x 16 mm	Hollow pin Ø3 x 16 mm	1
20	515.3980-R020P	Luftstromregler	Airflow regulator	1